


-WARNING-  
Sharp Edges

# LT90 Instruction Sheet

## Assembly

1. Bend all the tabs almost straight up with a flat screwdriver.
2. Mate the two parts so that the screw holes line up.
3. Secure the flanges with five sheet metal screws.
4. Bend the tabs down and tape the joints along the flange.

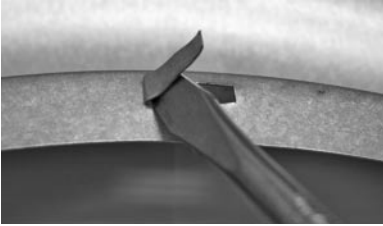

## Installation

1. Model LT90 should be measured as 1-1/2 feet against the total allowable duct length. See *engineering paperwork online at [www.dryer-ell.com](http://www.dryer-ell.com) and 2009 IMC Table 504.6.4.1 and IRC Table M1502.4.4.1 for 10" radius fittings.*
2. Arrow indicates airflow direction from dryer and provides for proper male and female connections.
3. When used with the Model 4D "Down" Dryerbox®, cut and insert a 3" long section of snaplock pipe to transition into port for adequate flex connection.

